

Harley Benton

HB-80B bass combo



user manual

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

11.07.2019, ID: 417214 (V4)

Table of contents

1	General information	. 4
	1.1 Further information	5
	1.2 Notational conventions	6
	1.3 Symbols and signal words	6
2	Safety instructions	8
3	Features	13
4	Installation and starting up	14
5	Connections and operating elements	15
6	Technical specifications	21
7	Plug and connection assignment	24
8	Protecting the environment	27

th•mann

1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under <u>www.thomann.de</u>.



1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.	
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.	
Online guides	Our online guides provide detailed information on technical basics and terms.	
Personal consultation	For personal consultation please contact our technical hotline.	
Service	If you have any problems with the device the customer service will gladly assist you.	

HB-80B

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics. **Examples:** [VOLUME] control, [Mono] button.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.



Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

HB-80B

thomann MUSIC IS OUR PASSION

2 Safety instructions

Intended use

This device is intended to be used for amplification and playback of signals from musical instruments with electromagnetic pickups. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.

th•mann MUSIC IS OUR PASSION



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.

HB-80B





CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



CAUTION!

Risk of injury due to heavy weight

Due to the heavy weight of the device, at least two persons are required for transport and installation.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.





NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



NOTICE!

Possible damage due to installation of a wrong fuse

The use of different types of fuses can cause serious damage to the unit. Fire hazard!

Only fuses of the same type may be used.

thomann MUSIC IS OUR PASSION

Features

3 Features

Special features of the device

- Output power
 - 80 watt @ 4 Ω (external speaker)
 - 40 watt @ 8 Ω (internal speaker)
- 1×12" Celestion speaker
- Aux input for connecting an MP3 or CD player
- Inputs
 - Instrument
 - Effects loop
 - Foot switch
- Outputs
 - Line
 - External speaker box
 - Balanced DI output
- Built-in compressor
- Standby function

th•mann

4 Installation and starting up

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



NOTICE!


Possible property damage by magnetic fields

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

thomann MUSIC IS OUR PASSION

5 Connections and operating elements

Front panel

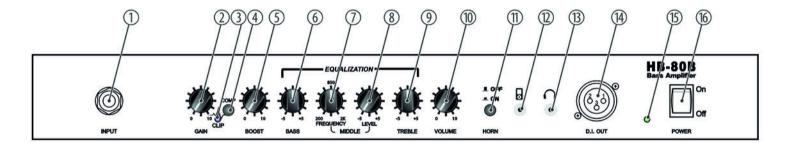

th.mann

1	[INPUT]
	1/4" jack socket to connect an instrument.
	You can also connect other active signal sources like CD or MP3 players, keyboards, mixers etc. to this input.
2	[GAIN]
	Control to adjust the signals preamp gain.
3	[CLIP]
	Indicator LED (blue). This LED lights up once the compressor is active.
4	[COMP]
	Pressure switch for enabling the built-in compressor.
5	[BOOST]
	Control to boost the bass frequency range.
б	[BASS]
	Control to adjust the low frequencies.




7	[MIDDLE FREQUENCY]
	Control to boost or lower the mid frequencies from 200 Hz 2 kHz.
8	[MIDDLE LEVEL]
	Control to adjust the mid frequencies.
9	[TREBLE]
	Control to adjust the high frequencies.
10	[VOLUME]
	Volume control.
11	[HORN]
	Turns the horn speaker on or off.
12	3.5 mm input socket for connecting an active signal source, e.g. CD or MP3 player.
13	3.5 mm output socket to connect headphones. Connecting headphones automatically mutes the built-in speaker.
14	[D.I. OUT]
	Balanced DI output for connecting to a mixing console or recording device.

th•mann

15	Standby indicator
	If there is no signal [INPUT] at the INPUT jack for 30 minutes, the device will automatically enter standby mode (LED green). As soon as the [INPUT] jack receives a signal again, the device automatically switches back to normal mode (LED red).
16	[POWER]
	Main switch to turn the device on and off.



Rear panel

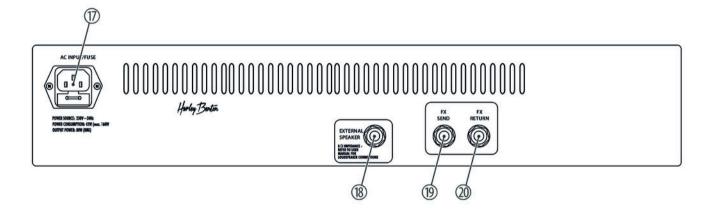

HB-80B



17	Mains chassis plug with fuse holder.
18	[EXTERNAL SPEAKER]
	1/4" output socket for connecting an external speaker box (recommended impedance: 8 Ω). The internal speaker will not be turned off when this connector is used.
19	[FX SEND]
	1/4" output socket for looping in an effects processor.
20	[FX RETURN]
	1/4" input socket for looping in an effects processor.



6 Technical specifications

Speaker	1 × 12" Celestion speaker	
Input connections	Voltage supply	IEC chassis plug C14
	Instruments	1/4" jack socket
	AUX	3.5 mm phone socket
	Effect device	1/4" jack socket
Output connections	Headphones	3.5 mm phone socket
	Mixer or recording device	XLR chassis socket, 3-pin
	External speakers (impedance min. 8 Ω)	1/4" jack socket
	Effect device	1/4" jack socket
Input impedance 220 kΩ		
Operating voltage	max. 1 V (RMS)	

th.mann

Output power	80 W (RMS) at 4 Ω (external speaker)	
	40 W (RMS) at 8 Ω (internal speaker)	
Frequency range	50 Hz8 kHz	
Signal-to-noise ratio	75 dB	
Total harmonic distortion (THD)	0.5 %	
Power consumption	max. 100 W	
Supply voltage	AC 230 V ~ 50 Hz	
Fuse	5 mm \times 20 mm, 1 A, 250 V, slow-blow	
Dimensions (W \times H \times D)	510 mm 510 mm × 354 mm	
Weight	21 kg	
Ambient conditions	Temperature range	0 °C40 °C
	Relative humidity	50 %, non-condensing



Further information

High frequency horn	Yes
Equalizer	3-band
Compressor	Yes
Limiter	No
Effect device	No
Socket for external speakers	Yes
Headphone connection	Yes
DI output	Yes
CD/MP3 input	Yes





7 Plug and connection assignment

Introduction	This chapter will help you select the right cables and plugs to connect your valuable equip- ment in such a way that a perfect sound experience is ensured.
	Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!
Balanced and unbalanced trans- mission	Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is trans- mitted through the core.
	Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.
	In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conduc- tors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.



Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

1/4" TS phone plug (mono, unbalanced)



1	Signal
2	Ground, shielding

1/4" TRS phone plug (mono, balanced)

0 2 3	1	Signal (in phase, +)
	2	Signal (out of phase, –)
	3	Ground


th•mann

Three-pole 1/8" mini phone jack (stereo, unbalanced)



1	Signal (left)
2	Signal (right)
3	Ground, shielding

 XLR plug (balanced)



	1	Ground, shielding
	2	Signal (in phase, +)
	3	Signal (out of phase, –)
-	4	Shielding on plug housing (option)



8 Protecting the environment

Disposal of the packaging material



Disposal of your old device



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



HB-80B





Musikhaus Thomann • Hans-Thomann-Straße 1 • 96138 Burgebrach • Germany • www.thomann.de