



- ① **Dimmer/Switch**
Button to turn the unit on and off and set the brightness of the LEDs
- ② **POWER IN**
Connection socket for the power adapter
- ③ **Color**
Button to set the colours of the LEDs

Operating

1. **Turn the unit on and off**
Keep the button [Dimmer/Switch] pressed until the unit switches on or off.
2. **Brightness setting**
Repeatedly press the button [Dimmer/Switch] to select one of the three brightness levels of the LEDs.
3. **Macros setting**
Repeatedly press the button [Colors] to select one of the 15 hues of the LEDs.
4. **Memory function**
All settings of brightness and macros are retained, even if the unit is disconnected from the mains.

- Multicolour rack light an even illumination of the rack
- Suitable for 19" racks (1 RU)
- 15 selectable macros with different hues
- Three selectable brightness levels
- Memory function
- Incl. power adapter
- Strain relief for the power adapter
- Light source: 30 × multicolour RGBW 4in1 LEDs
- Colour temperature: 3200K, 5600K, 7200K
- Light output: 150 lumen
- Power supply: 12 V \equiv
- Current consumption: 1 A @ 12 V \equiv
- Material: metal
- Colour: black
- Dimensions (W × H × D):
485 mm × 44 mm × 60 mm
- Weight: 0.9 kg



Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!

Never let children play unattended with the product.

Always use properly insulated, tripe-core mains cable. Do not modify the mains cable or the plug. Failure to do so may result in electric shock and lead to a fire hazard and risk of death. If in doubt, seek advice from a registered electrician.

Within the device there are areas where high voltages may be present.

Never remove any covers. There are no user-serviceable parts inside.

Do not use the device when covers, safety equipment or optical components are missing or damaged.



Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly the user. Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



For the packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste. Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.