

## Hero Remote Spot Wash 140

Read and follow the safety instructions and all other instructions. Keep the manual for future reference. If you pass the product to another person, please pass the user manual with it.

### Safety instructions

#### Intended use

This device is intended for transmitting radio commands. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.


#### Danger for children



Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow small parts and choke! Never let children play unattended with the electrical devices.

### Features

- Suitable for item no. 460307 Varytec Hero Spot Wash 140 2in1 RGB+W

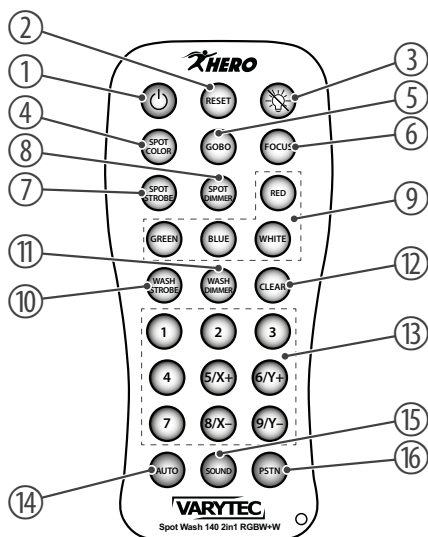

### Controls

- ① Turns the remote control on and off.
- ② Performs a device reset (duration approx. 45 s).
- ③ Switches LEDs on or off in manual colour mixing mode.
- ④ Colour macros
- ⑤ Selection of different gobos.
- ⑥ Adjusts the focus in eight steps.
- ⑦ Adjusts the strobe effect of the spot LED in eight steps.
- ⑧ Dims the overall intensity of the spot LED in eight steps.
- ⑨ Manual colour mixing of the wash LEDs in four steps per colour.
- ⑩ Adjusts the strobe effect of the wash LEDs in eight steps.
- ⑪ Dims the overall intensity of the wash LEDs in eight steps.
- ⑫ Switches off all set functions.  
Press again ③ for the subsequent manual colour mixing.
- ⑬ Number pad  
[1] / [2] / [3] / [4] / [5/X+] / [6/Y+] / [7] / [8/X-] / [9/Y-]  
When ⑭ is activated:  
Selects the automatic programmes [1] ... [9].  
[5/X+] / [6/Y+] / [8/X-] / [9/Y-]  
When ⑮ is activated:  
Manually sets the static position.
- ⑭ Activates the selection of automatic programmes.
- ⑮ Activates the sound-control.
- ⑯ Activates the manual static position adjustment.

### Insert the battery

Press the lock of the battery holder to the centre of the housing and pull out the battery holder like a drawer. Insert the battery. The battery is correct if the positive pole points to the housing base of the remote control. Slide the battery holder back into the remote until it clicks into place. When shipping, the battery is already installed in the remote and protected against discharge by a transparent plastic foil. Remove the plastic foil prior to first use.

### Technical specifications

- Battery type: Lithium button cell, 3 V, CR 2025
- Dimensions (W × H × D): 47 mm × 110 mm × 7 mm
- Weight: 21 g



For the packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste. Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



Batteries must not be disposed of as domestic waste or thrown into fire. Dispose of the batteries according to national or local regulations regarding hazardous waste. To protect the environment, dispose of empty batteries at your retail store or at appropriate collection sites.