


## Setup Guide / 組み立てガイド / 安装指南

Read this in conjunction with the aDrums Owner's Manuals.  
aDrums 取扱説明書と合わせてお読みください。  
请结合 aDrums 使用说明书一起阅读本文件。

## Setup example / セットアップ例 / 安装举例



## Trigger cable connection / トリガーケーブルの接続 / 连接触发器连接线

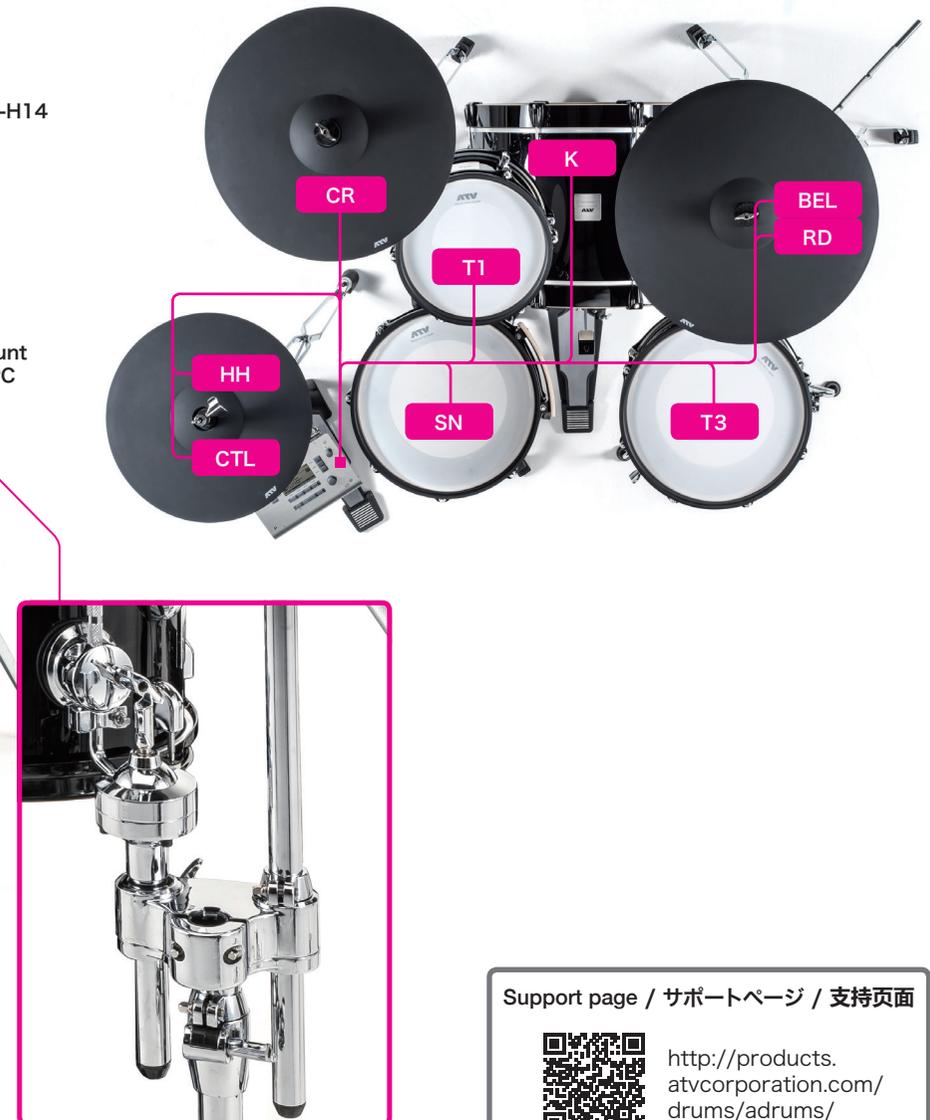

- EN**
- Kick pedal and hi-hat stand are sold separately.
  - For the aD-H14 hi-hat, also connect the included AC adapter. For details, refer to the owner's manual of the aD-H14.
  - Attach the included plug cap to unused T2 plug. Touching an unused plug to metallic things can cause unintended triggering.
- JA**
- キックペダル、ハイハットスタンドは別売です。
  - aD-H14 ハイハット付属の AC アダプターも接続します。詳しくは aD-H14 の取扱説明書をご覧ください。
  - 付属のプラグキャップを未使用の T2 プラグに装着してください。未使用プラグが金属に触れると誤発音の原因になります。
- ZH**
- 请另购底鼓踏板和踩镲支架。
  - 当您使用 aD-H14 踩镲时，请同样连接随其附属的 AC 适配器。详细信息请参阅 aD-H14 使用说明书。
  - 请将随设备附属的端口护帽套在 T2 端口上。未使用的端口碰触金属物件将会引起不必要的信号触发。

Support page / サポートページ / 支持页面



<http://products.atvcorporation.com/drums/adrums/>

Setup example / セットアップ例 / 安装举例

[EXPANDED SET]



Trigger cable connection / トリガーケーブルの接続 / 连接触发器连接线

- EN
- Kick pedal and hi-hat stand are sold separately.
  - For the aD-H14 hi-hat, also connect the included AC adapter. For details, refer to the owner's manual of the aD-H14.
  - To connect pads to the AUX 1 or AUX 2 trigger inputs, use the included trigger cable with each pad.
- JA
- キックペダル、ハイハットスタンドは別売です。
  - aD-H14 ハイハット付属の AC アダプターも接続します。詳しくは aD-H14 の取扱説明書をご覧ください。
  - AUX 1、AUX 2 は、付属のトリガーケーブルで接続してください。
- ZH
- 请另购底鼓踏板和踩镲支架。
  - 当您使用 aD-H14 踩镲时，请同样连接随其附属的 AC 适配器。详细信息请参阅 aD-H14 使用说明书。
  - 如果您想将打击垫连接 AUX 1 或 AUX 2 触发输入接口，请使用随各打击垫附属的触发器连接线。

